


L85GSP

Emergency Eye/Face Wash - Plumbed-in Type: Laboratory

Pedestal-mounted eye/face wash with integral powder coated stainless steel bowl which meets the requirements of the ANSI Z358.1-2014 and European Standard EN 15154 for Laboratories. Dust covers protect the twin spray nozzles from contaminants and are lifted off by the water jets upon operation. The eye wash diffusers are fitted with fine mesh strainers and an individual flow controller and are designed to give a gentle flow of aerated water. Includes universal eye wash sign for enhanced visibility.

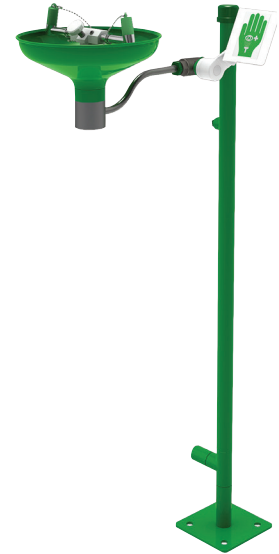

Specifications

MATERIALS OF CONSTRUCTION	
PIPEWORK & FITTINGS (GS)	Stainless steel tubulars & fittings
OPERATING VALVE	316L stainless steel, two piece stay open valve
EYE/FACE WASH BOWL	Powder coated stainless steel
EYE WASH DIFFUSERS	Chrome plated brass with stainless steel mesh
STANDARD FINISH	Green powder coated finish
SERVICES	
WATER INLET	1 in Male NPT
DESIGN OPERATING PRESSURE	2.0 to 6 BAR G (29 to 87 PSI)
TEST PRESSURE	10.3 BAR G (149 PSI)
MINIMUM FLOW RATES	Eye/face wash: 11.4 liters/minute minimum (3 US Gallons)
ENVIRONMENTAL OPERATING TEMPERATURE	
MINIMUM AMBIENT OPERATING TEMPERATURE	5° C (41° F)
MAXIMUM AMBIENT OPERATING TEMPERATURE	35° C (95° F)
ACTIVATION/OPERATION	
EYE/FACE WASH	Push plate
NOMINAL WEIGHTS and DIMENSIONS	
DIMENSIONS (WxDxH)	314 mm (12.4 in) x 547 mm (21.5 in) x 1116 mm (43.9 in)
WEIGHT	8 kg (18 lbs)




Justrite Safety Group

RM07288 RevA

hughes-safety-showers.com

Emergency Eye/Face Wash - Plumbed in Type: Laboratory

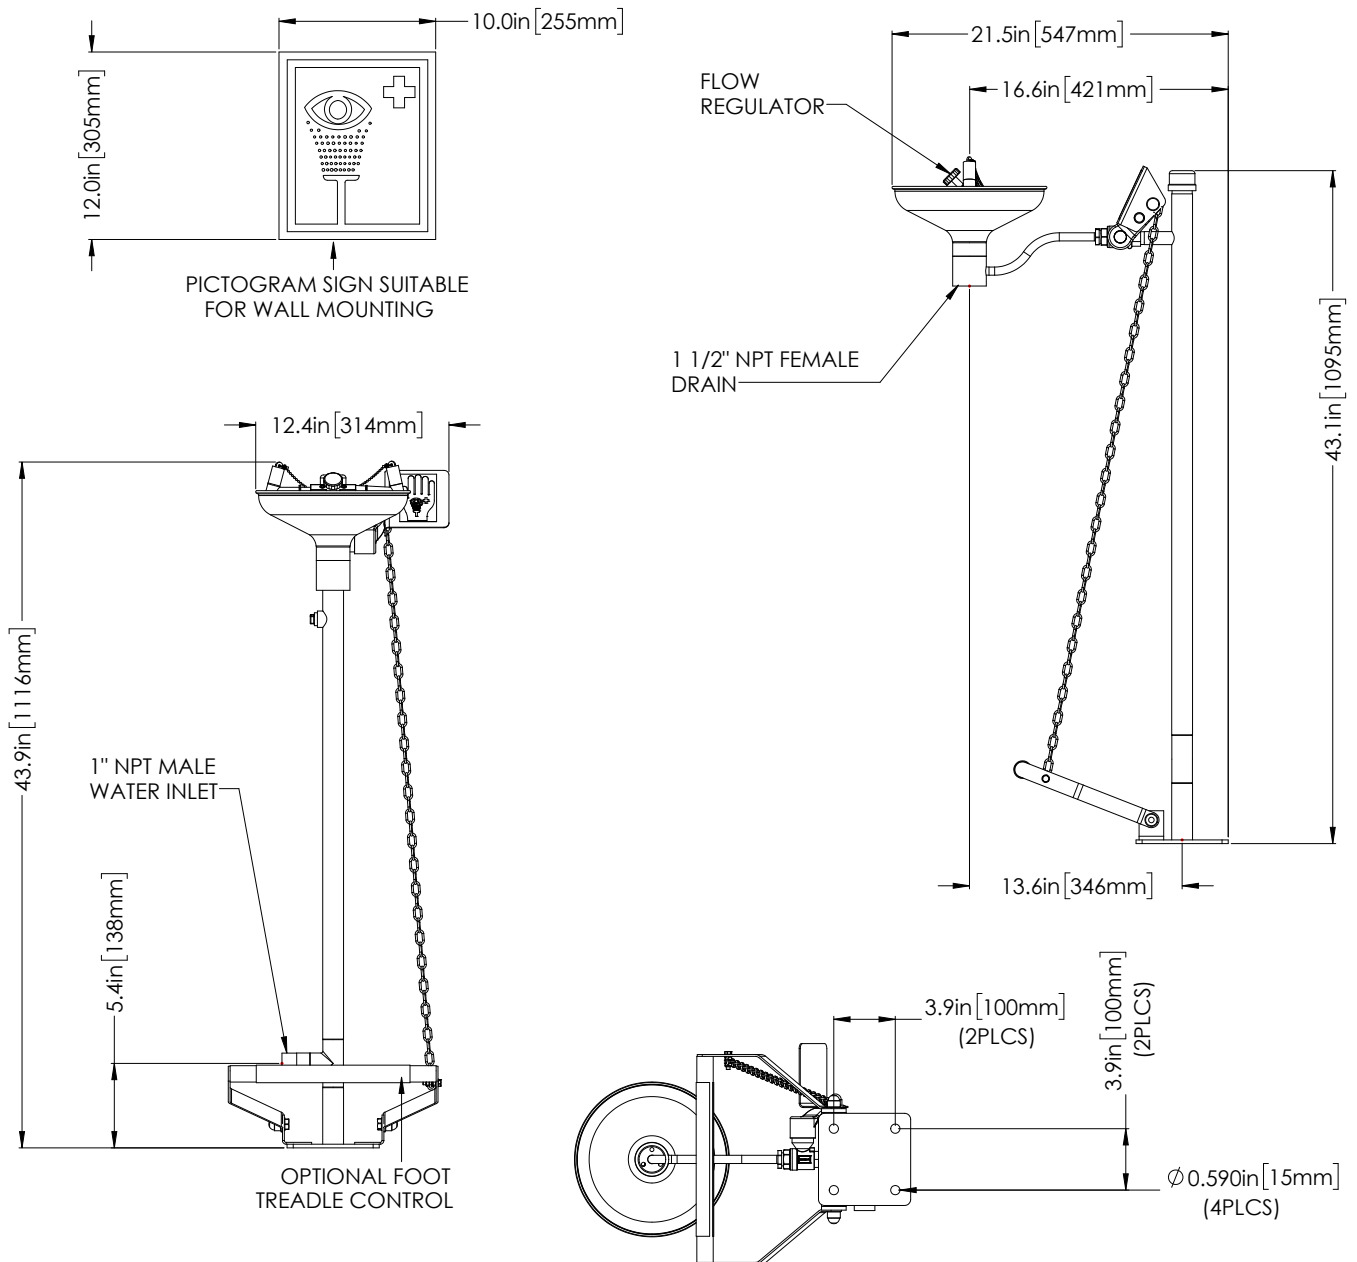

VARIATIONS IN MANUFACTURING AND ASSEMBLY
ALLOW FOR $\pm 1/8$ in [3 mm] PER THREADED JOINT.

MOUNTING PLATE VIEW
(MOUNTING HARDWARE NOT INCLUDED)

HUGHES

HUGHES-SAFETY-SHOWERS.COM
Justrite Safety Group

Hughes North America
457 Campbell Street
Sarnia, Ontario N7T 2J1, Canada.

For Technical Support Contact:
customer.service@hughes-safety.com • 1-866-312-1652

For Reorder & Sales Support Contact:
custserv@justrite.com • 1-800-798-9250

Registered No. 0939240. VAT Registration No. 918 5005 32 ©2019 Hughes Safety Showers