


PORTA300-16E

Portable Decontamination Shower

Designed to be both lightweight and robust, this 16 nozzle portable decontamination shower removes contaminants from protective clothing prior to removal. Ideal for use by civil and military fire services, chemical and petrochemical industries, armed services and civil defense units, the unit can be quickly deployed in cases of major chemical, biological and nuclear incident in less than a minute.

The 1-1/2" lay-flat synthetic rubber hoses form four shower legs, each of which is fitted with four spray nozzles. Once erected and coupled to a fire appliance, water is admitted to the apparatus and the hoses become rigid under pressure, adopting a curved form to give 360° decontamination. The rugged carrying case doubles as an effective base platform, the design of which is a lay-flat host assembly, complete with non-slip raised platform.

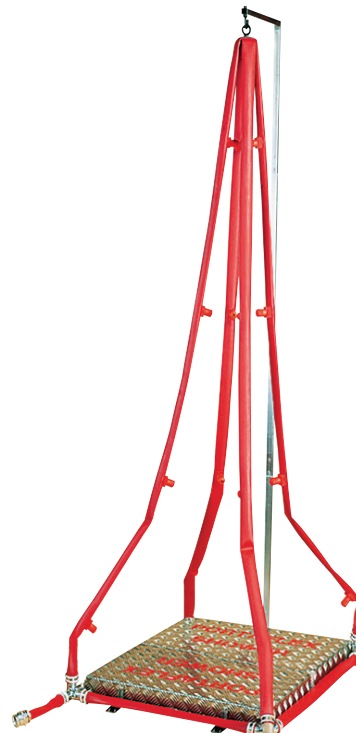

Specifications

TECHNICAL DETAILS	
INLET SIZE COUPLING	1½ in NH (F)
WATER FLOW	462 US gallons (1750 liters) max. per min
DIMENSIONS - Packed (WxDxH)	19.7 in (500 mm) x 7.5 in (190 mm) x 30.3 in (770 mm)
DIMENSIONS - Assembled (WxDxH)	33.5 in (850 mm) x 51.2 in (1300 mm) x 97.6 in (2480 mm)
WEIGHT	55 lb (25 kg)
ASSEMBLY TIME	Less than a minute





Justrite Safety Group

RM07325 RevA

hughes-safety-showers.com

Portable Decontamination Shower

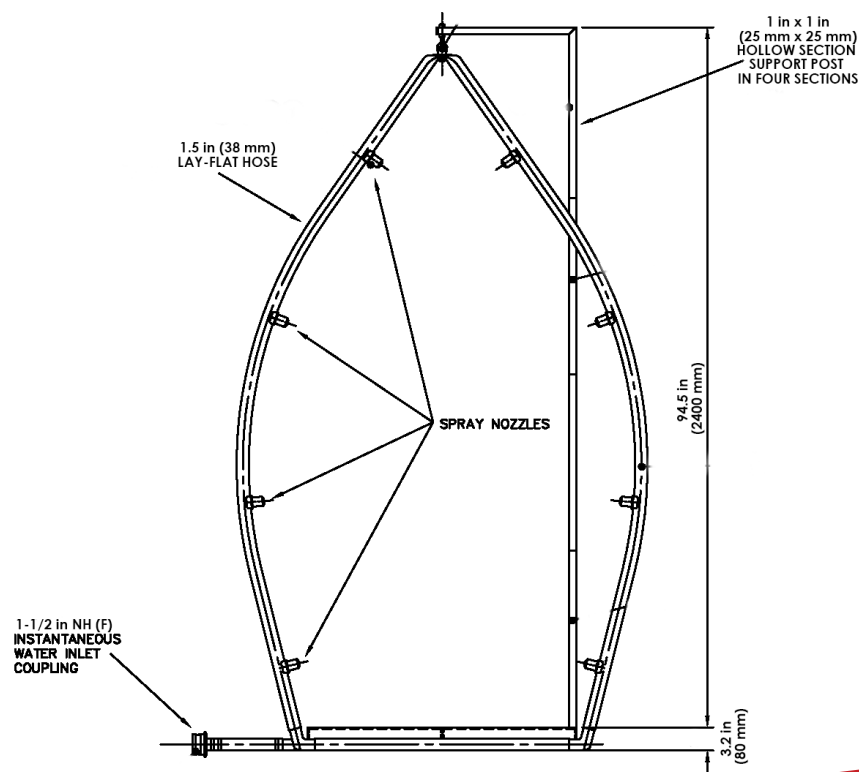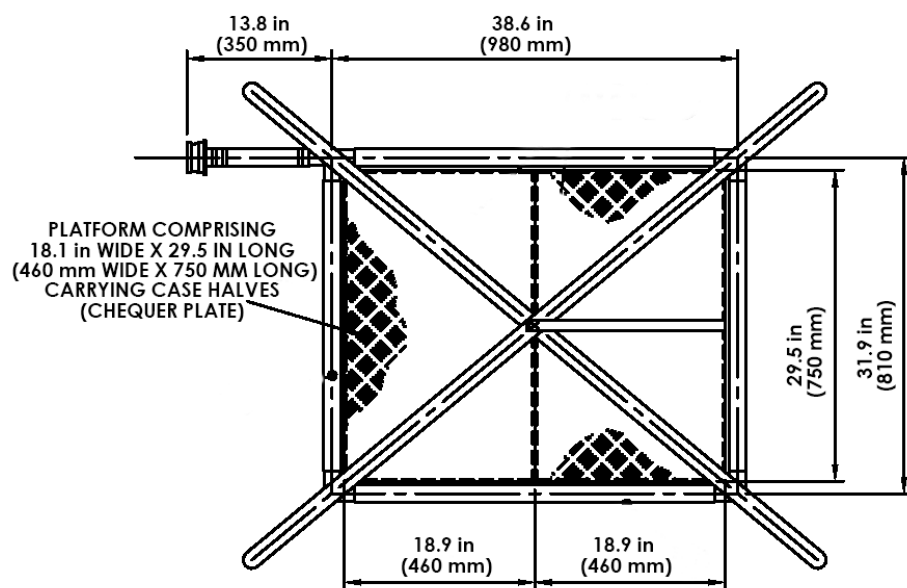

For Technical Support Contact:
customer.service@hughes-safety.com • 1-866-312-1652

For Reorder & Sales Support Contact:
custserv@justrite.com • 1-800-798-9250

HUGHES

HUGHES-SAFETY-SHOWERS.COM

Justrite Safety Group

Hughes North America
457 Campbell Street
Sarnia, Ontario N7T 2J1, Canada.

Registered No. 0939240. VAT Registration No. 918 5005 32 ©2019 Hughes Safety Showers